


### Installation guide

- 1, For dimension of machine, please refer to machine specification respectively or contact with us.
- 2, Equipment installation: please attach the ice machine above the ice storage bin , and be sure ice outlet align with ice inlet of storage bin.
- 3, Water system installation: 0.1-0.5MPa water pressure recommended, connect water inlet with water supply, place overfall gap pipe in space where water is allowed to discharge, water discharge outlet would be used only when cleaning water tank.
- 4, Main power supply installation: three phase ,five-wire system adopted with 3 live wires, a null line, a earth line, if machine is unable to start , please try to switch the two phase lines and start it again.

### Maintenance

- 1, condenser cleaning: For air cooled ice machine, please clean fin once in a month generally. Specifically it depends on environment and frequency of machine use. Keeping the cleanliness of condenser ensure the optimal state the machine will be. efficiency and long lifespan as well
- 2, Cleaning of water tank and water distribution tray is pretty necessary for the fact that water scale ,bacteria and sediment would occurred inside as time goes by ,for securing clean ice you will get ,please wash them with specified detergent and disinfect later.
- 3, Reducer maintenance: regular check it in case the losing bolt, Insure its smooth operation

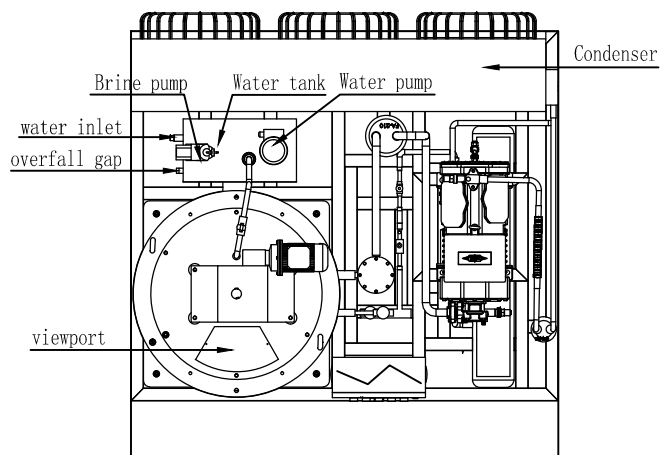

 深圳市中雪制冷设备有限公司 Shenzhen Zhongxue Refrigeration Equipment Co., Ltd				Air cooling flake ice machine				
设计			审批		图号		件号	
制图			审核		数量		共	张
标检			会审		比例		第	张
校对								

设计	签字
制图	
校对	