



Installation guide

- 1, For dimension of machine, please refer to machine specification respectively or contact with us.
- 2, equipment installation: fasten ice machine and ice storage in right position first, and connect the ice outlet of ice machine and ice inlet of storage room with screw conveyer
- 3 Water system installation: 0.1-0.5MP water pressure recommended, connect water inlet with water supply, place overfall gap pipe in space where water is allowed to discharge, water discharge outlet would be used only when cleaning water tank.
- 4, Cooling tower installation: connect cooling tower , water pump and condenser according to their label and pay attention to outlet/inlet direction, insert power lines of water pump and fan to the electrical terminals inside the electric cabinet.
- 5, Main power supple installation: three phase ,five-wire system adopted with 3 live wires, a null line, a earth line, if machine is unable to start , please try to switch the two phase lines and start it again.
- 6, Tube ice thickness is adjustable through setting the freezing time, but solid tube ice is not recommended for lowering the machine efficiency

Maintenance

- 1, Please check cooling tower fan, bearing and water complement system regularly in case of the clog occurring, keep stuffing and condenser clean enable machine to operate in optimal condition, ensure long lifespan and efficiency.
- 2, Cleaning of water tank and water distribution tray is pretty necessary for the fact that water scale ,bacteria and sediment would occurred inside as time goes by ,for securing clean ice you will get ,please wash them with specified detergent and disinfect later.
- 3, Reducer maintenance: regular check it in case the loosing bolt, Insure its smooth operation

 深圳市中雪制冷设备有限公司 Shenzhen Zhongxue Refrigeration Equipment Co., Ltd				Tube Ice Machine			
设计		审批		图号		件号	
制图		审核		数量		共	张
标检		会审		比例		第	张
校对							

设计	签字
制图	
校对	